


Press and hold the PTT key.

Pause then speak clearly at 5cm from microphone.


Release PTT when finish speaking

When external Mic & Speaker connected use the PTT button on external mic

Turn Squelch knob to where hiss/noise just stops

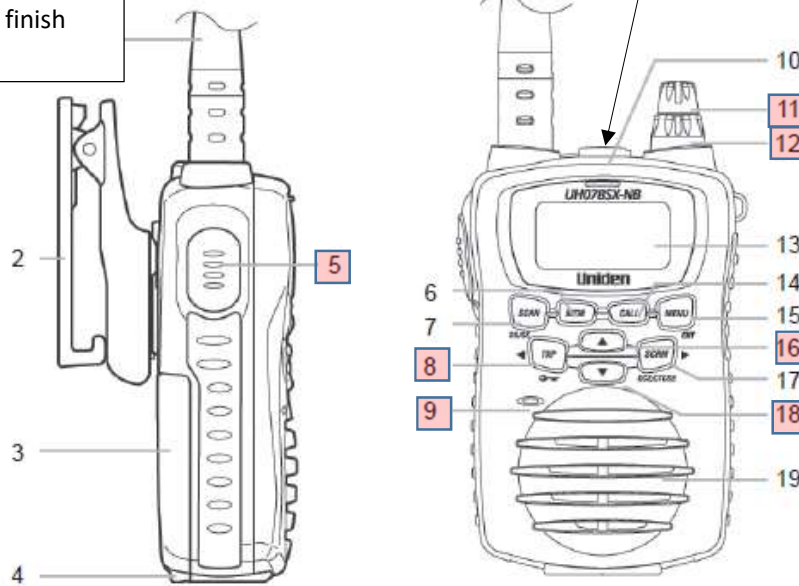

- 1 Antenna
- 2 Beltclip
- 3 Battery
- 4 Battery Release Clip
- 5 PTT (Push to Talk) Key
- 6 Memory Key (MEM)
- 7 Scan Button (SCAN)/  
Open Scan/Group Scan
- 8 TXP Power Lock Button/ ◀
- 9 Microphone
- 10 Speaker MIC Jack
- 11 ON/OFF VOL Knob
- 12 Squelch Knob (SQ)
- 13 LCD Display
- 14 Call Tone Button (CALL)
- 15 Menu/Enter Button  
(MENU/ENT)
- 16 Channel Up Button (▲)
- 17 Scramble/DCS/CTCSS/ ▶  
Button
- 18 Channel Down Button (▼)
- 19 Speaker

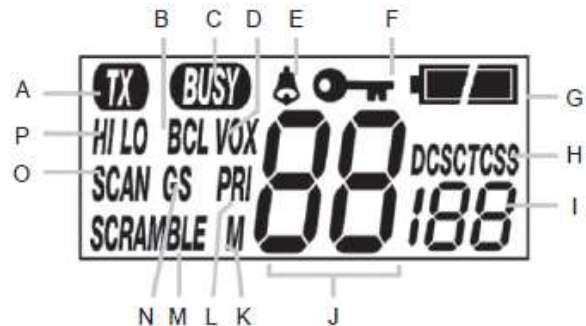

- A Transmit
- B Busy Channel Lock Out
- C Busy
- D Voice Activation (VOX)
- E Roger Beep
- F Key Lock
- G Battery Level Indicator
- H DCS/CTCSS
- I DCS/CTCSS Indicator
- J Channel Number
- K Scan Memory
- L Priority Watch
- M Scramble
- N Group Scan
- O Scan
- P HI/LO Transmit Power

TX is Display when PTT pressed

BUSY Display when channel in use

Charge  
When low

Switch to HI if  
Reception is  
Poor – button 8